

## Touchkit Driver Installation Guide for SuSe 9.0

The Touchkit driver package for Suse 9.0 is touchkit.setup\_suse90.sh. To install this package, it needs the share utility uuencode/uudecode. You can find this package in the Suse 9.0 disc. It should be sharutils-xxx-xx.rpm. Please install this package before both “compact” and “full” mode installation.

After driver installation, the default setting Sound was turned off. To enable the sound, please edit the configuration file /etc/X11/xinit/xinitrc. Find the section

#Add your own lines here...

Add the following line in the section

```
/usr/bin/tpaneld -f &
```

Then, save it.

For other detail installation procedure, Please take a reference to the User Guide for Linux.